



SEDGBEER

AT THE FOREFRONT OF POULTRY PROCESSING

MANUAL SINEW PULLER USER GUIDE

This device is very simple to use and makes the job of removing sinews from chicken, turkeys and geese etc.. very easy, quick and efficient.

Its tough, durable design and construction means no maintenance or service is required.

The sinew puller needs to be firmly mounted either on a table or on a wall or post vertically.


- Table top mounted
- No maintenance or service required
- Separates the leg and pulls the sinews - one leg at a time.
- Dimensions -Height 480mm Weight 5.2kg



To use the device, place the foot of the bird in the jaws of the grip while the hock of the leg is inserted between the V-Slot in the base of the machine, this ensures the pull is taken from below the hock.



It is recommended that the shinbone is broken just above the foot before commencing to draw, ensuring the sinews come out easily and cleanly without damaging the flesh of the leg.

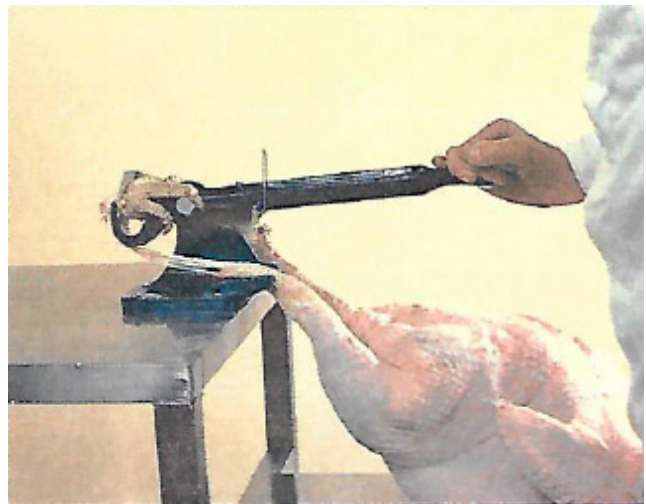

GET IN TOUCH

If you would like to talk to us,
please contact us using the
details below:

T +44 (0)1761 420 058
info@sedgbeer.co.uk
www.sedgbeer.co.uk
